

Component Systems

Gas bar should never be left in tunnel system when ignited, after injecting gas in tunnel, pull gas bar out of tunnel, kick dirt in hole and tamp, walk back to control box with gas bar in hand and hit the button, if gas bar is left in tunnel it will malfunction.

Happy hunting

Varmitgetter